

Site Systems Software Graphics Guide


The screenshot displays the Site Systems Software interface. At the top, there is a 'Welcome' section with a 'User Banner' and 'Default Refresh: 5 Minutes' dropdown. Below this is a 'Sound' dropdown set to 'None' and 'Comms'. The main header features the 'SITE SYSTEMS SOFTWARE LLC.' logo and a 'Banner' label. The navigation bar includes 'SUMMARY', 'ALARMS', 'OVERLAY', 'GOOGLE MAP', and 'SETTINGS' tabs, along with a 'GROUP: Site Route Demo' dropdown and an 'EDIT' button. The central table lists meter data with columns for Meter Name, Date, Time, Pressure, DP, Temperature, and DP/EXT. The bottom of the interface shows a time selection menu (1, 2, 7, 15, 30, 60, 90, 365) and an email field containing 'Info@SiteSystemsSoftware.com'. A copyright notice at the bottom reads 'Copyright 2012 Site Systems Software LLC. All Rights Reserved'.

Meter Name	Date	Time	Pressure	DP	Temperature	DP/EXT
Albarras	01/10/2014	11:00	481.27	115.84	65	182.15
Berwick	01/10/2014	11:00	455.60	123.73	73	214.13
Clear Water 2	01/10/2014	11:00	466.45	102.42	76	194.86
Clear Water	01/10/2014	11:00	482.87	112.60	80	206.95
Loch	01/10/2014	11:00	535.80	110.80	68	211.99
Mid-Clarke	01/10/2014	11:00	440.11	105.39	77	208.30
North Hill	01/10/2014	11:00	483.47	99.99	62	211.56
Northwest	01/10/2014	11:00	417.12	87.85	67	222.73
North	01/10/2014	11:00	487.81	77.96	65	180.04
Old	01/10/2014	11:00	470.66	91.12	64	179.12
Old Clarke	01/10/2014	11:00	518.95	108.82	61	192.31

Banner Resolution (760x140)



User Banner Resolution (200x140)

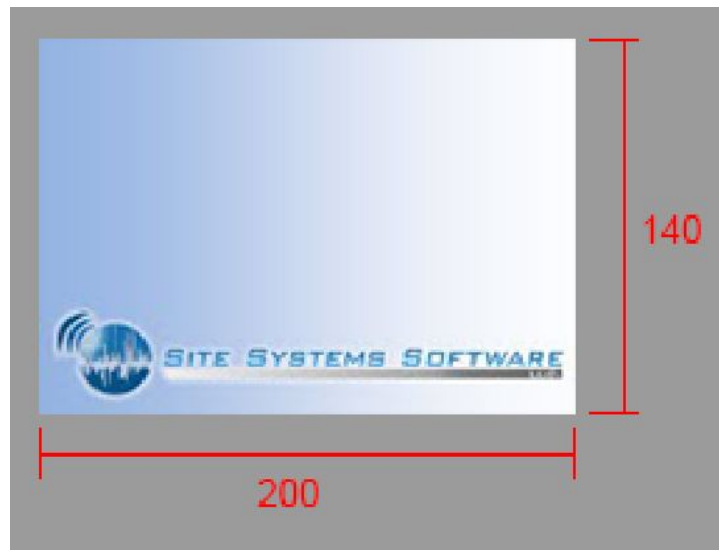

Background Color



#9b9b9b